

RESIDENTIAL POOL

Natural Pool Water Treatment

EcoMaster - Residential Pools up to 40,000 Gallons

INSTALLATION/ OPERATION GUIDE



T-O₃ NATURAL TECHNOLOGY

Reduces Chemical Usage,
Improves Sanitation
Produces Crystal Clear Water

EcoMaster

IMPORTANT SAFETY INSTRUCTIONS

Read and Follow All Safety Instructions

- Read and be familiar with this manual before installing or operating your new Eco Master.
- Voltage must be determined before unit is installed.
- If cord becomes damaged replace immediately.
- Do not bury cord.
- Connect only to a properly grounded, grounding type receptacle.
- Install at least 5 feet from the inside wall of the pool using non-metallic plumbing. The ozone generator is to be located one foot above the maximum water level to prevent water from contacting electrical equipment. Install to provide drainage of compartment for electrical components.
- Wear safety glasses when drilling and tapping holes for installation of unit.

WARNING: Short term inhalation of high concentrations of ozone and long term inhalation of low concentrations of ozone can cause serious harmful physiological effects. Do not inhale ozone gas produced by this device.



WARNING: Disconnect all power to pool equipment prior to installation, maintenance, or removal of the Eco Master.



WARNING: Do not permit children to operate this product



WARNING: To avoid risk of electric shock, fire, or injury, service should only be performed by a qualified pool service professional.



WARNING: Installation must be performed in accordance with the National Electric Code and any applicable local or state installation codes.



WARNING: When mixing acid with water, ALWAYS ADD ACID TO WATER, NEVER WATER TO ACID.

NOTE: The instructions in this document provide general installation guides. Consult your dealer for specific installation instructions. Additional information is available at www.prozoneint.com. Check system for any visible shipping damage. If damage has occurred, contact the delivery company and your dealer immediately. Before beginning installation, please turn to the Installation Kit Inventory Section and verify that all listed parts are on hand.

Tools Needed: Power Drill with 7/8" hole saw, Screw Driver, Pliers, Knife

SAVE THESE INSTRUCTIONS

EcoMaster

INTRODUCTION TO OZONE

The Prozone system produces ozone when air is drawn across a special high-energy vacuum ultraviolet (VUV) lamp, converting some air to ozone. A venturi injector is inserted on the return line, by-passing water back into the return line of the pool which creates suction that draws the ozone into the venturi, mixing the bubbles as the water returns to the pool. It is operated automatically by connecting the Prozone system directly to the circulation pump or plugging into a timer. A check valve is employed to prevent water back up in the event of system failure. A siphon loop is recommended for added backpressure resistance. The system should run 8-12 hours per day for good results; 24 hours per day for optimum water clarity and minimum chemical usage.

Although ozone is mainly thought of as a sanitizer, it acts primarily as an oxidizer in the pool environment. In a typical pool, using chlorine only, up to 90 percent of the chlorine may be used up in reactions unrelated to disinfection. The byproducts of these reactions are combined chlorines. Combined chlorines are the cause of eye irritation, odor, and the other unpleasant side effects of chlorination. When ozone is used, it oxidizes a large portion of the contaminants (usually referred to as bather load) which results in the formation of combined chlorines. The result is that more chlorine is available for disinfection and less chlorine is required to maintain the pool. Ozone also provides some disinfection, but an ozone residual cannot be established, so the use of chlorine or bromine is always recommended. Baquacil may also be used in conjunction with the Prozone system for water sanitation. Refer to the Baquacil manual for shocking instructions.

PREPARING FOR INSTALLATION

1. Check for and correct all leaks in plumbing.
2. Balance the pH.
3. Backwash the filter on retrofit installation.
4. Shock the pool. The use of Calcium Hypochlorite is recommended, or hydrogen peroxide if Baquacil is used.

CAUTION: Make sure voltage is the same as prescribed on the side of the Prozone Ozone Generator.

The table below summarizes the levels that are recommended by The Association of Pool and Spa Professionals (APSP). It is important to maintain these levels in order to prevent corrosion or scaling and to ensure maximum enjoyment of the pool. Test your water periodically. Take a water sample in to be professionally tested by a Pool and Spa Professional at least once a month. See our web site for more information on Basic Pool Water Chemistry.

| | |
|-----------------------|---------------|
| pH | 7.2 – 7.6 |
| Alkalinity | 80 – 120 ppm |
| TDS | < 1,000 |
| Cyanuric Acid | 30 – 70 ppm |
| Free Chlorine | 0.5 – 1.5 ppm |
| Calcium Hardness | 60 – 400 ppm |
| Metals | 0 ppm |
| Nitrates / Phosphates | < 30 ppm |


Saddle Clamp Assembly Installation

| | | | |
|---|--|--|--|
| <p>For bypass Entrance, After Pump and before Filter (Step 2) Using 1-1/2" pipe, Assemble: PVC Pipe Saddle Clamp Top & Bottom Top & Bottom Adapters Bushing (Note direction) Gasket Screws (2) Nuts (2)</p> | | <p>For bypass Exit, After Filter/Heater (Step 5) Using 1-1/2" pipe, Assemble: PVC Pipe Saddle Clamp Top & Bottom Top & Bottom Adapters Bushing (Note direction) Gasket Screws (2) Nuts (2)</p> | |
|---|--|--|--|

Note: For 2" pipe, do not use 1-1/2" adapters and gasket and turn Bushings so small end points toward PVC Pipe.

EcoMaster

INSTALLATION ASSEMBLY USING EO2 Bypass kit

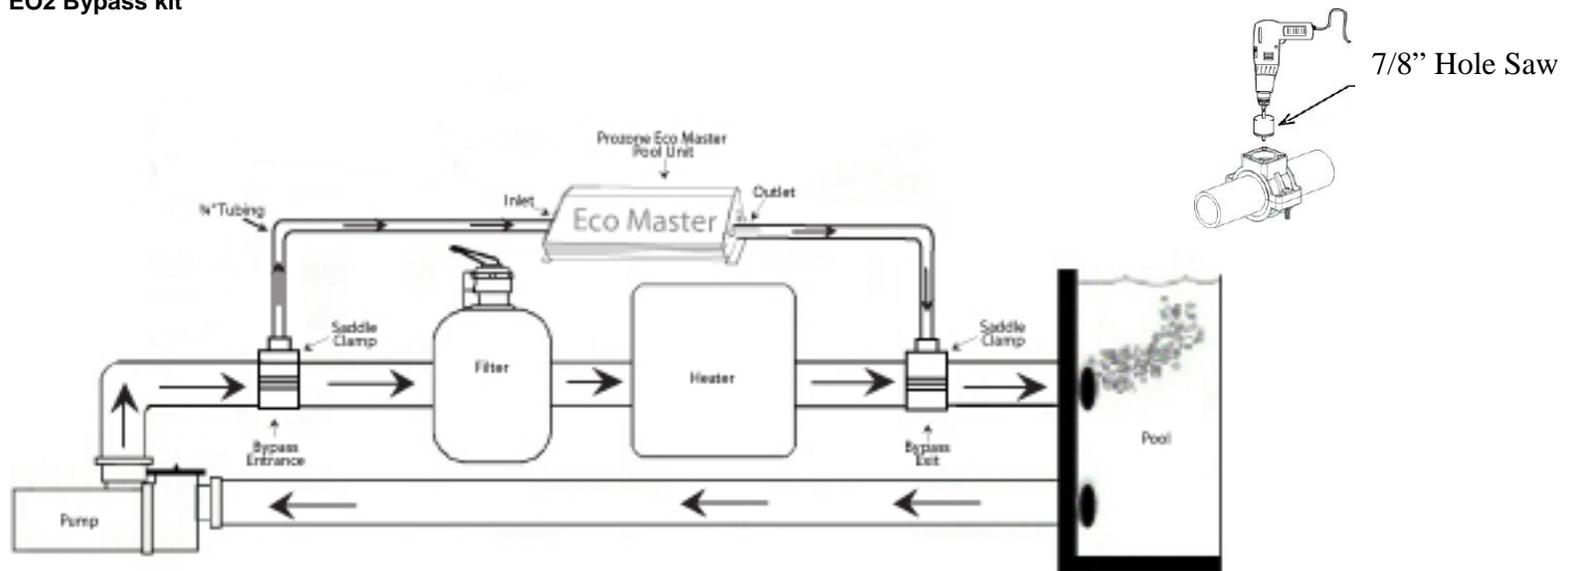


1. Turn pump OFF.
2. Locate section of existing plumbing in which you choose to install the ENTRANCE leg of the bypass. Location should be in any accessible area after the pump, but before the filter.
3. Install Saddle Clamp Top & Bottom, (and adapters if needed), without Bushing, (this will be used as a guide for your installation hole).
4. Drill a 7/8" hole through one wall of the pipe, using power drill, being careful not to drill too deep to avoid penetrating the opposite side of the plumbing.
5. Locate section of existing plumbing in which you choose to install the EXIT leg of the bypass. Location should be in any accessible area after the filter and heater (if equipped).
6. Repeat steps 3 & 4.
7. Remove both Saddle Clamp Assemblies.
8. Using components listed, mount the other Saddle Clamp Assembly on Exit bypass location with the 1/2" x 3" PVC pipe mounted in the Saddle Clamp Bushing. Tighten both screws.
9. Using components listed, mount the other Saddle Clamp Assembly on Entrance bypass location with the 1/2" x 3" PVC pipe mounted in the Saddle Clamp Bushing. Tighten both screws.
10. Attach one end of 3/4" clear hose to the ECOMASTER INLET (power cord side) and secure with a metal clamp. Attach other end of 3/4" clear hose to 1/2" x 3" PVC pipe and secure with a metal clamp.
11. Attach one end of 3/4" clear hose to the ECOMASTER OUTLET and secure with a metal clamp. Attach other end of 3/4" clear hose to 1/2" x 3" PVC pipe and secure with a metal clamp.
12. Mount the ECOMASTER Ozone Generator on a wall or surface at least 1 foot above maximum water level to prevent water from contacting the electrical equipment. **Unit orientation should be mounted horizontally.**
13. Electrical Installation: Your Prozone ECOMASTER System is designed to operate on either 120 or 240 VAC, 50/60 HZ. Wire Prozone Ozone Generator system to circulation pump switch or timer. Prozone system and circulation pump should be started simultaneously. Use N.E.C. or local code grounding and installation procedures for swimming pool equipment.
14. **No more than 10 PSI of pressure at the bypass exit of the return line.**

NOTE: If your filtration system uses a Diatomaceous Earth (DE) or cartridge filter, install a 3/4" Ball Valve (not included) in the 3/4" Hose on the output side of the 1/2" x 3" PVC. This allows the bypass to be closed when back flushing or adding DE. It may be necessary to install a Ball Valve (not included) in the main line between the Entrance and Exit of the bypass, (entire installation is moved after filter or heater if equipped). The Ball Valve will need to be adjusted to ensure adequate flow through the bypass.

EcoMaster

INSTALLATION ASSEMBLY USING EO3 PVC TEES KIT

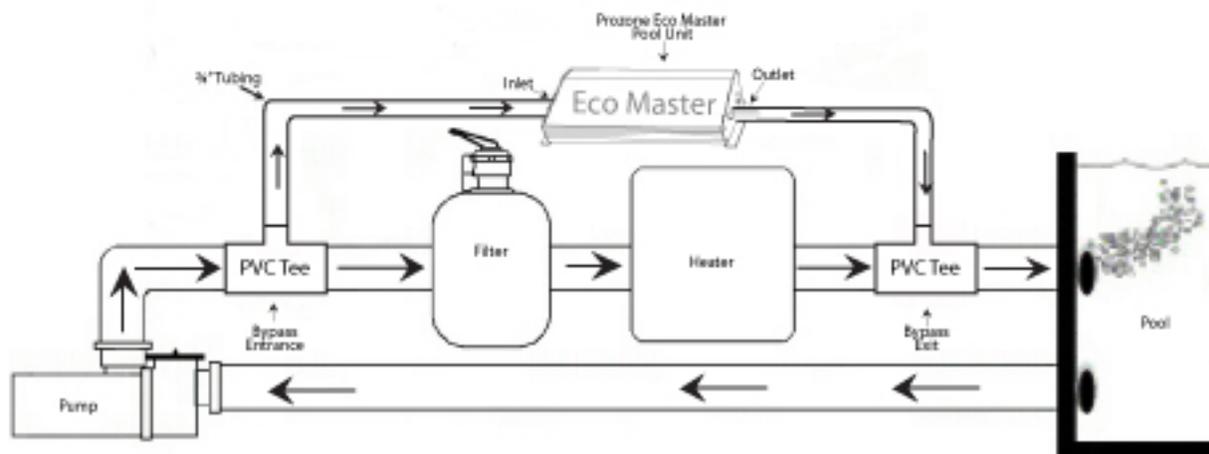

1. Turn pump OFF.
2. Locate section of plumbing in which you choose to install the ENTRANCE leg of the bypass. Location should be in any accessible area after the pump, but before the filter.
3. Install a PVC Tee that has $\frac{3}{4}$ FPT, with the threaded portion of the Tee facing upward.
4. Locate section of plumbing in which you choose to install the EXIT leg of the bypass. Location should be in any accessible area after the filter, and heater (if equipped).
5. Install a PVC Tee that has $\frac{3}{4}$ FPT, with the threaded portion of the Tee facing upward.
6. Apply Teflon tape to the threads of the (2) $\frac{3}{4}$ " MPT x $\frac{3}{4}$ " HB fittings, part number 20678, and screw the fittings into the (2) PVC Tees you installed in steps 3 and 5.
7. Connect $\frac{3}{4}$ " Hose to the end to the fitting on the ENTRANCE side of the bypass, (after the pump, before the filter), and secure with a metal clamp.
8. Connect the other end of the hose to the INLET side of the ECOMASTER INLET (power cord side) and secure with a metal clamp.
9. Attach one end of the remaining $\frac{3}{4}$ " hose to the OUTLET side of the ECOMASTER and secure with a metal clamp.
10. Attach other end of $\frac{3}{4}$ " hose to the fitting on the EXIT side of the bypass, (after the filter/heater), and secure with a metal clamp .
11. Mount the ECOMASTER Ozone Generator on a wall or surface at least 1 foot above maximum water level to prevent water from contacting the electrical equipment. **Unit orientation should be mounted horizontally.**
12. Electrical Installation: Your Prozone ECOMASTER System is designed to operate on either 120 or 240 VAC, 50/60 HZ. Wire Prozone Ozone Generator system to circulation pump switch or timer. Prozone system and circulation pump should be started simultaneously. Use N.E.C. or local code grounding and installation procedures for swimming pool equipment.
13. **No more than 10 PSI of pressure at the bypass exit of the return line.**

NOTE: If your filtration system uses a Diatomaceous Earth (DE) or cartridge filter, install a $\frac{3}{4}$ " Ball Valve (not included) in the $\frac{3}{4}$ " Hose on the outlet side of the unit . This allows the bypass to be closed when back flushing or adding DE. It may be necessary to install a Ball Valve (not included) in the main line between the Entrance and Exit of the bypass, (entire installation is moved after filter or heater if equipped). The Ball Valve will need to be adjusted to ensure adequate flow through the bypass.

CAUTION: Make sure the voltage is the same as prescribed on the side of the Prozone ozone generator. Incorrect voltage will void customer warranty.

INSTALLATION KIT INVENTORY

| E02 Saddle Clamp Installation Kit | | | E03 PVC Tees Installation Kit | | |
|-----------------------------------|-------------|----------|-------------------------------|-------------|----------|
| Description | Part Number | Quantity | Description | Part Number | Quantity |
| Metal Clamp 1¼" | 20067 | 4 | Metal Clamp 1¼" | 20067 | 4 |
| Clear Vinyl Hose ¾" | 20264 | 144" | Clear Vinyl Hose ¾" | 20264 | 144" |
| PVC Pipe ½" x 3" | 20314 | 2 | PVC Fitting 2" SL x ¾" FPT | 201095 | 2 |
| Screw # 8 x ¾" PPSMS | 20109 | 4 | PVC Fitting 2" SP x 1½" SL | 201114 | 4 |
| Saddle Clamp, Outer Top | 201155-4 | 2 | PVC Fitting ¾" MPT x HB | 20678 | 2 |
| Saddle Clamp, Outer Bottom | 201155 | 2 | Screw # 8 x ¾" PPSMS | 20109 | 4 |
| Saddle Clamp, Inner Top | 201155-2 | 2 | | | |
| Saddle Clamp, Inner Bottom | 201155-3 | 2 | | | |
| Saddle Clamp Gasket | 400076 | 2 | | | |
| Saddle Clamp Bushing | 201155-5 | 2 | | | |
| Screw #14 x 1½" PPMS | 201863 | 4 | | | |
| Nut ¼-20 | 20703 | 4 | | | |

TROUBLESHOOTING GUIDE

| PROBLEM | PROBABLE CAUSE | REMEDY |
|--|---|---|
| No light from Prozone unit | Loose wiring | Check all wiring connections |
| | No power to unit | Check voltage compatibility Check power source |
| | Defective lamp or other internal component | Return unit to dealer |
| No bubbles from unit or no evidence of ozone in pool | Leak in fittings | Replace fittings |
| Cloudy water; foamy water; scum | Water chemistry out of balance | Check readings and balance accordingly |
| | Total Dissolved Solids (TDS) level too high | Refer to dealer for proper water testing |
| | Filter not working | Clean or replace filter |

NOTE: Cloudy water may occur when the ozone generator is started. Filter and backwash as necessary.

PROZONE® Advanced Oxidation Purification Products LIMITED WARRANTY

Warranty is offered on this unit for a period of 24 months from date of purchase, and extends only to the original purchaser. If this unit becomes unserviceable due to defects in materials or workmanship within 24 months from date of purchase, it will be repaired or replaced without charge. Warranty does not apply to breakage due to obvious misuse. Warranty period for a repaired or replaced unit applies to the original date of purchase of the unit. Manufacturer will repair or replace based on evaluation of returned unit.

In order to receive warranty service, a Returned Goods Authorization (RGA) number must be obtained from Prozone before returning the product. The RGA number must be issued prior to end of warranty period. Product must be returned within 30 days of issuance of the RGA number. If the product is not received by Prozone within 30 days of RGA number issuance, another RGA number must be obtained.

This warranty along with the sales receipt must accompany the unit when it is returned. The RGA number must be printed prominently on the bottom left corner of the address side of the return packaging. To obtain an RGA number, or for any questions regarding warranty service, please contact:

| | |
|------------------------|---|
| PROZONE WATER PRODUCTS | Email: sales@prozoneint.com |
| 3004 11th Ave. | Tel: 256-539-4570 |
| Huntsville, AL 35805 | Fax: 256-539-4225 |

This warranty is void if the unit has been opened, or if the product identification label has been removed or altered. This warranty does not cover damage resulting from misuse, abuse, accident, fire, flood, lightning or other acts of nature, lack of reasonable care, or subjecting the product to any but the specified voltage.

Under the terms of the warranty, manufacturer assumes no responsibility for any injury, loss or damage (direct, indirect, or consequential) arising out of the use of or inability to use the product. Manufacturer assumes no responsibility for labor involved in removal of defective part, shipping or installation of new part. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is in lieu of all other warranties, expressed or implied.

RETURNS WITHOUT AN RGA NUMBER WILL BE REJECTED

PLEASE COMPLETE THIS WARRANTY ON THE DAY OF INSTALLATION AND RETURN TO:

PROZONE WATER PRODUCTS

3004 11TH AVE, HUNTSVILLE, AL 35805

Failure to return this warranty information will void this warranty

Date of purchase: _____ Purchased from: _____
Supplier Telephone No.: _____ Model Number _____
Date of installation: _____ Installed by: _____
Name: _____ Telephone No.: _____
Address: _____ City: _____
State: _____ Zip: _____ Email: _____
Residential application: _____